

Memory & Run/Stop protect

What are Memory & Run/Stop Protect?

Run/Stop protect is a feature that makes the PLC reject any start/stop command unless a specific input is ON.

Memory protect is an extension of the Run/Stop protect that will reject any project transfer to the PLC unless a specific input is ON.

This way a remote hacker cannot Start/Stop the PLC or download a corrupted project into the PLC.

How to Activate Run/Stop and Memory Protect? (Unity v11)

In the configuration tab of the M580, tick the feature you want to enable and type in the variable allowing/rejecting commands.

