



TN ITME106 InTouch Machine Edition: Licensing a Development System



Description

How to license InTouch Machine Edition on your Development Computer

- **Author: Dillon Perera**
- **Published: 03/30/2015**
- **Applies to: InTouch Machine Edition 7.1**

Details

License Models:

Demo Mode: By default InTouch Machine Edition will run in Demo Mode, allowing the user to run the development environment for a total of 40 hours.

Softkey License: These are used for demonstration and consignment licenses, where physical hardware was not purchased. This will require internet access.



Hardkey License: These are licenses tied to a USB dongle that was received with the panel.

Licensing:

1. Install InTouch Machine Edition.
2. Go to Start > Programs > Wonderware > InTouch Machine Edition v7.1 > Register.
3. Select the type of license you want to enable, either Hardkey or Softkey license.
 - A. Hardkey: Ensure the USB dongle is plugged in, then press the Check button.
 - B. SoftKey:
 1. Select the Network adapter you want to associate with the license. Choose a network card which will not be removed or disabled in the future.
 2. Copy the Hardware Identifier that is displayed.
 3. Go to the Wonderware's activation website:
<http://wwdotprod10.wonderware.com/pr...n/default.aspx>
 4. Paste the Hardware Identifier from step 3 into the website, and submit to receive your activation code.

