






YOKOGAWA CENTUM CS- UNIX BASE


Steps for Continuous Alarm Printing Configuration

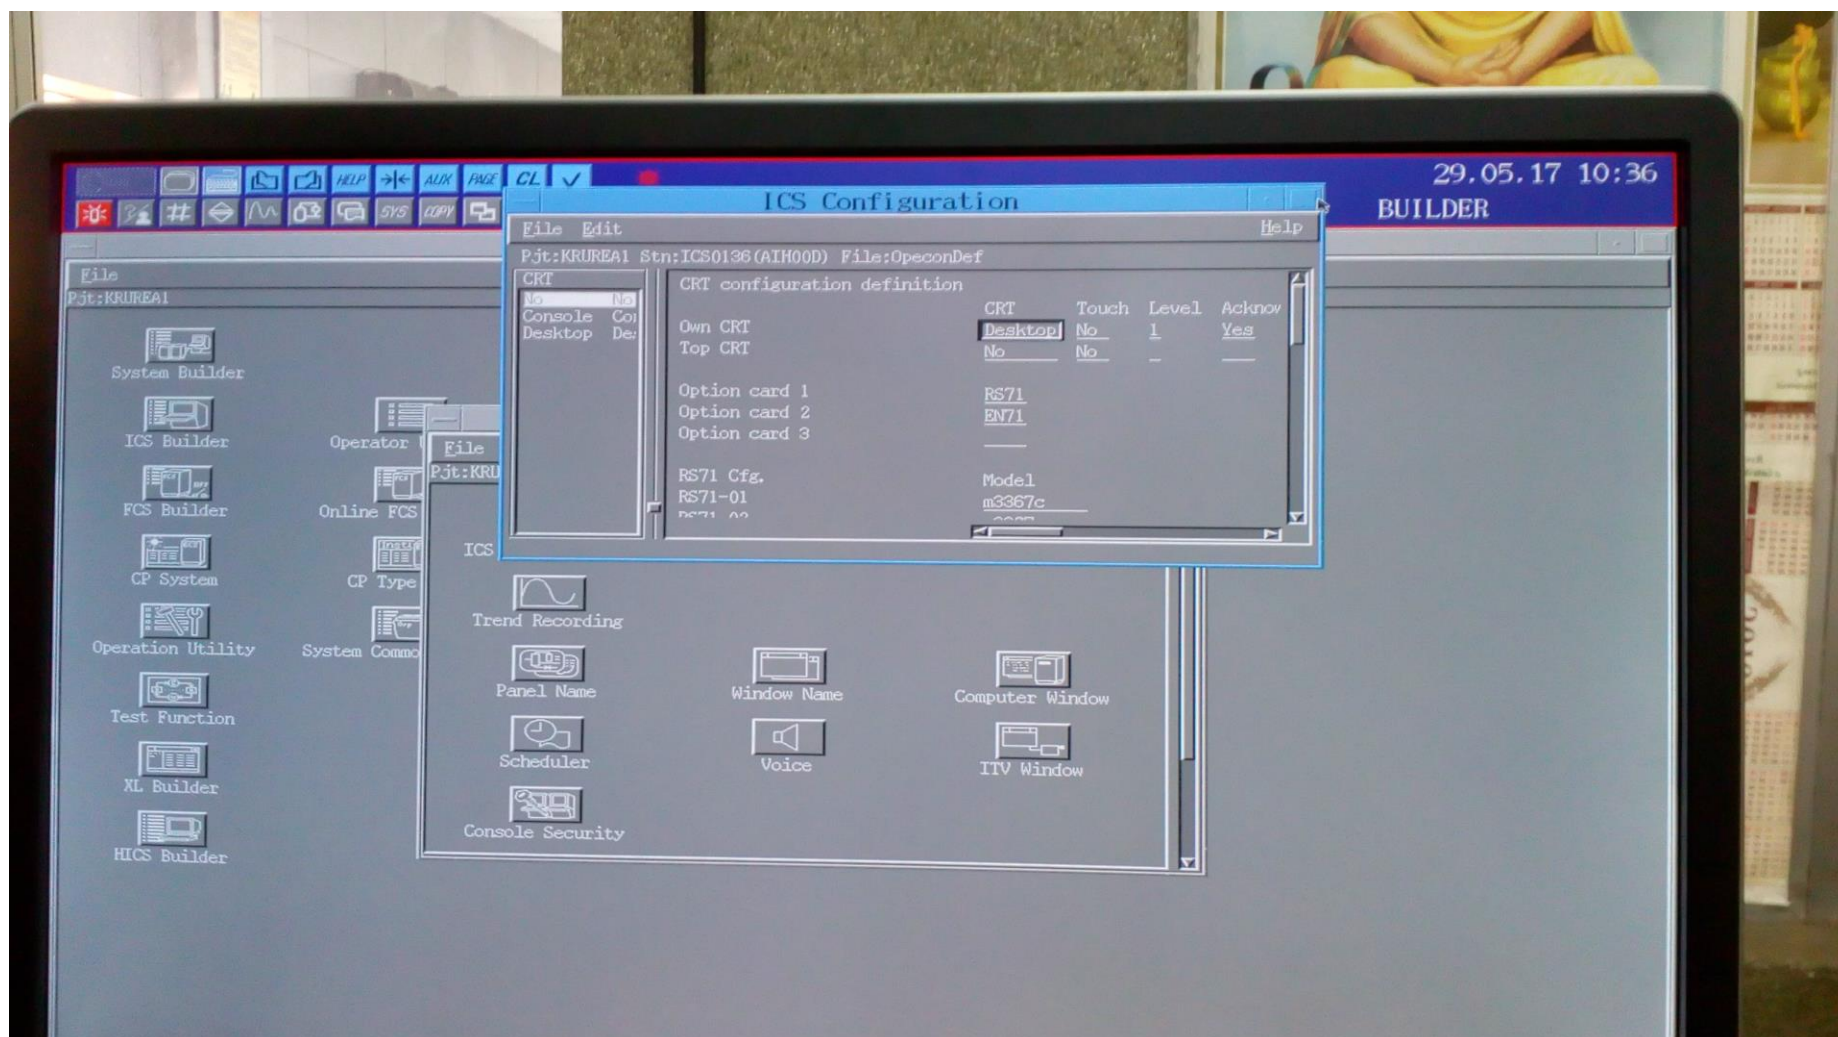



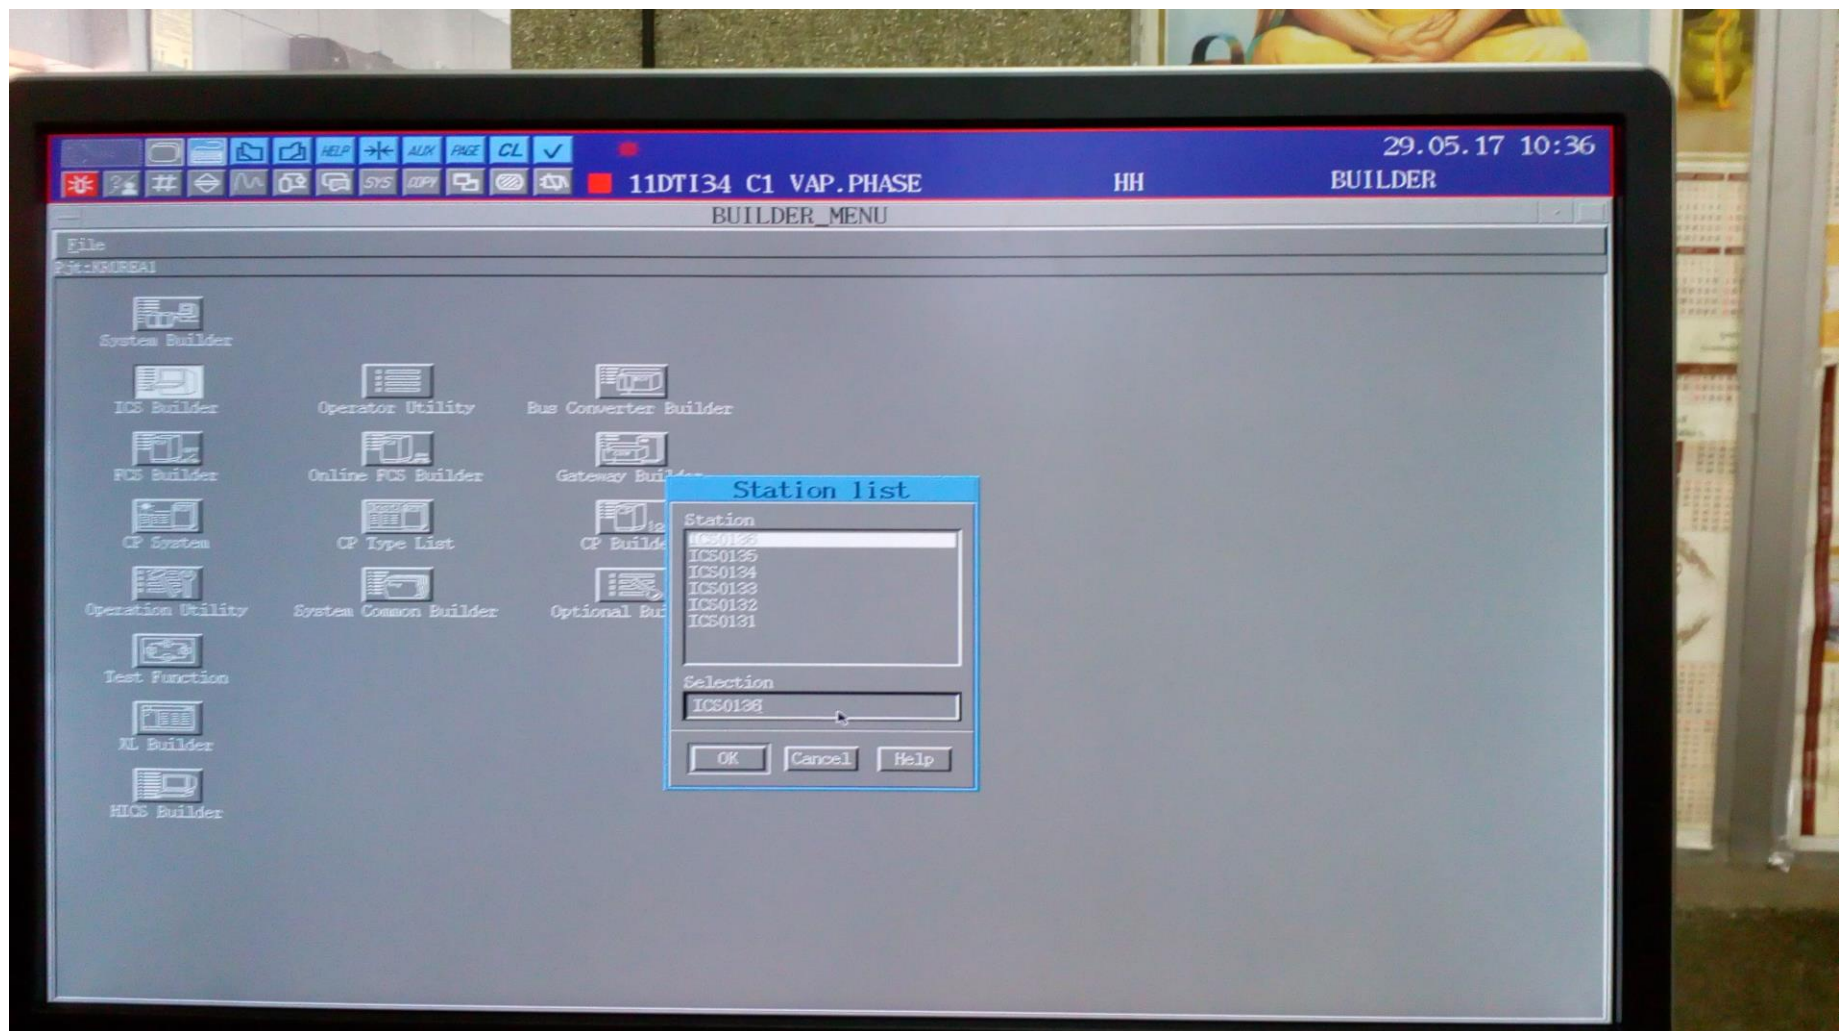

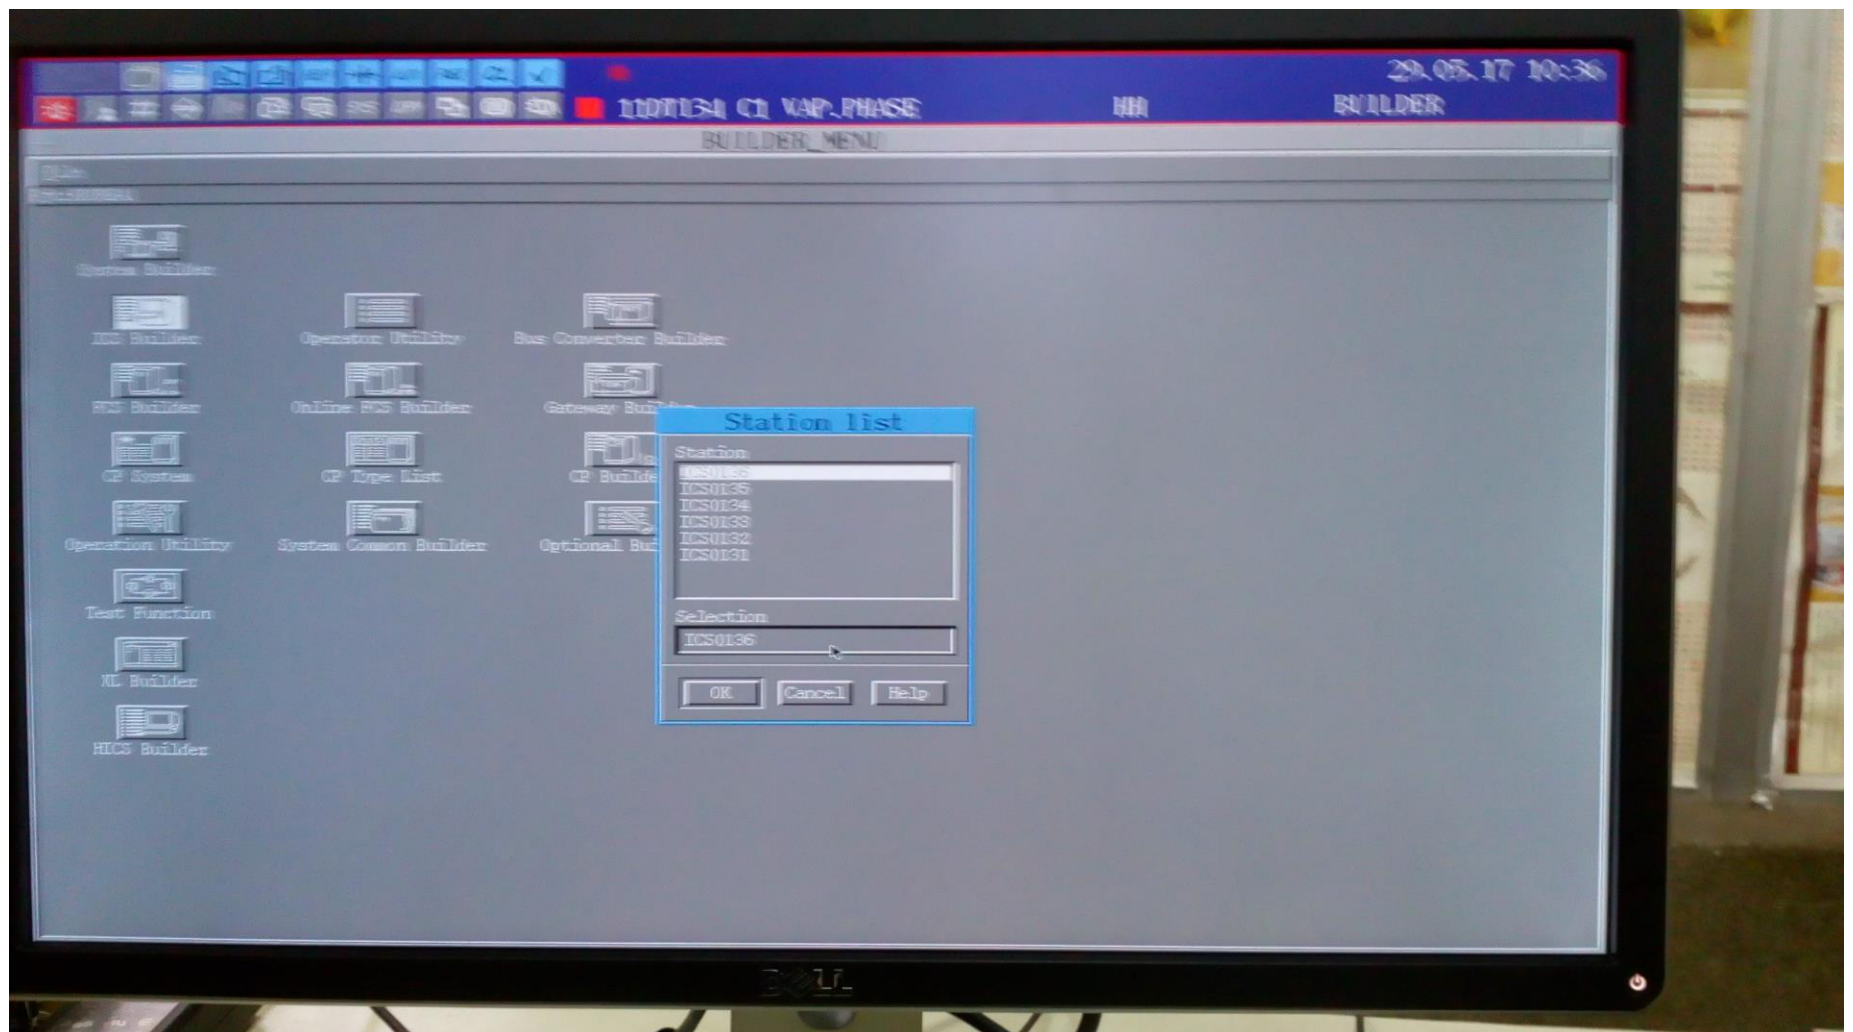

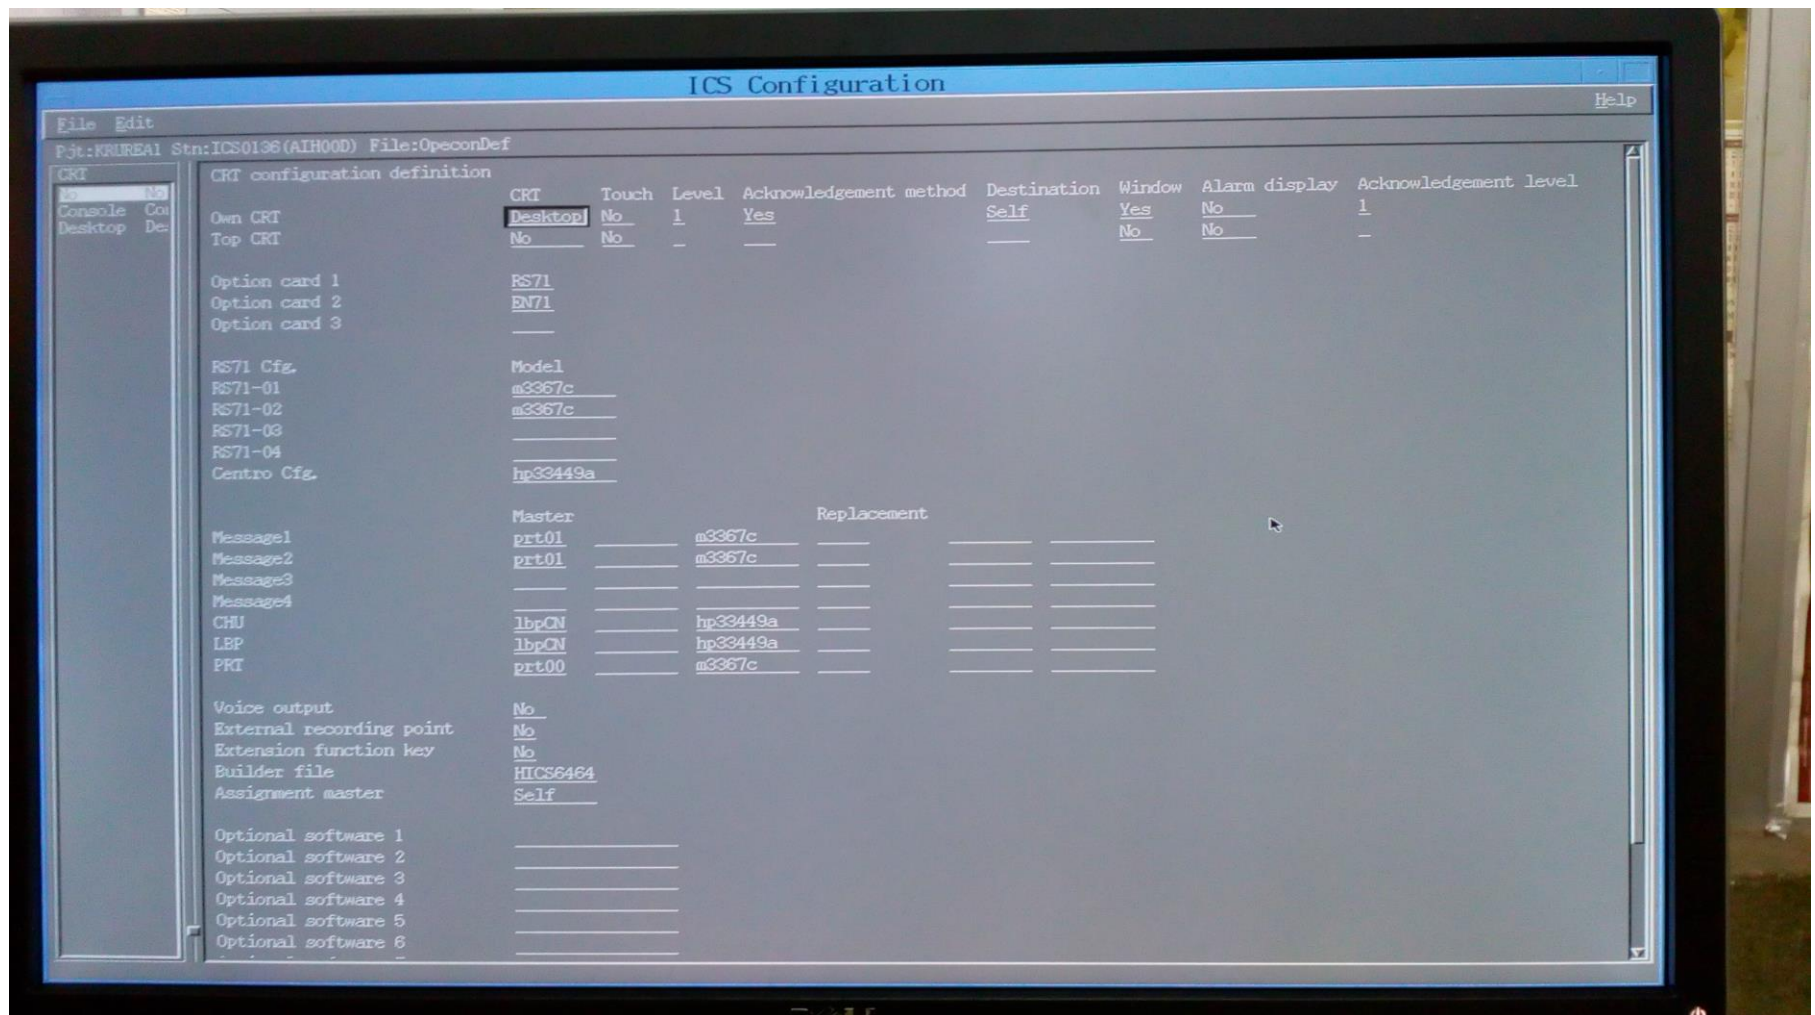


ICS Configuration

File Edit Help

Pjt:KRURSA1 Stn:ICS0136(AIH000) File:OpeconDef

CRT	CRT configuration definition	CRT	Touch	Level	Acknowledgement method	Destination	Window	Alarm display	Acknowledgement level
Own CRT		<u>Desktop</u>	<u>No</u>	<u>1</u>	<u>Yes</u>	<u>Self</u>	<u>Yes</u>	<u>No</u>	<u>1</u>
Top CRT		<u>No</u>	<u>No</u>	<u>-</u>	<u>-</u>	<u>-</u>	<u>No</u>	<u>No</u>	<u>-</u>
Option card 1		<u>RS71</u>							
Option card 2		<u>EN71</u>							
Option card 3		<u>-</u>							
RS71 Cfg.		<u>Model</u>							
RS71-01		<u>m3367c</u>							
RS71-02		<u>m3367c</u>							
RS71-03		<u>-</u>							
RS71-04		<u>-</u>							
Centro Cfg.		<u>hp33449a</u>							
Message1		<u>prt01</u>		<u>m3367c</u>					
Message2		<u>prt01</u>		<u>m3367c</u>					
Message3		<u>-</u>		<u>-</u>					
Message4		<u>-</u>		<u>-</u>					
CHU		<u>lbpCN</u>		<u>hp33449a</u>					
LBP		<u>lbpCN</u>		<u>hp33449a</u>					
PRT		<u>prt00</u>		<u>m3367c</u>					
Voice output		<u>No</u>							
External recording point		<u>No</u>							
Extension function key		<u>No</u>							
Builder file		<u>HICS6464</u>							
Assignment master		<u>Self</u>							
Optional software 1		<u>-</u>							
Optional software 2		<u>-</u>							
Optional software 3		<u>-</u>							
Optional software 4		<u>-</u>							
Optional software 5		<u>-</u>							
Optional software 6		<u>-</u>							

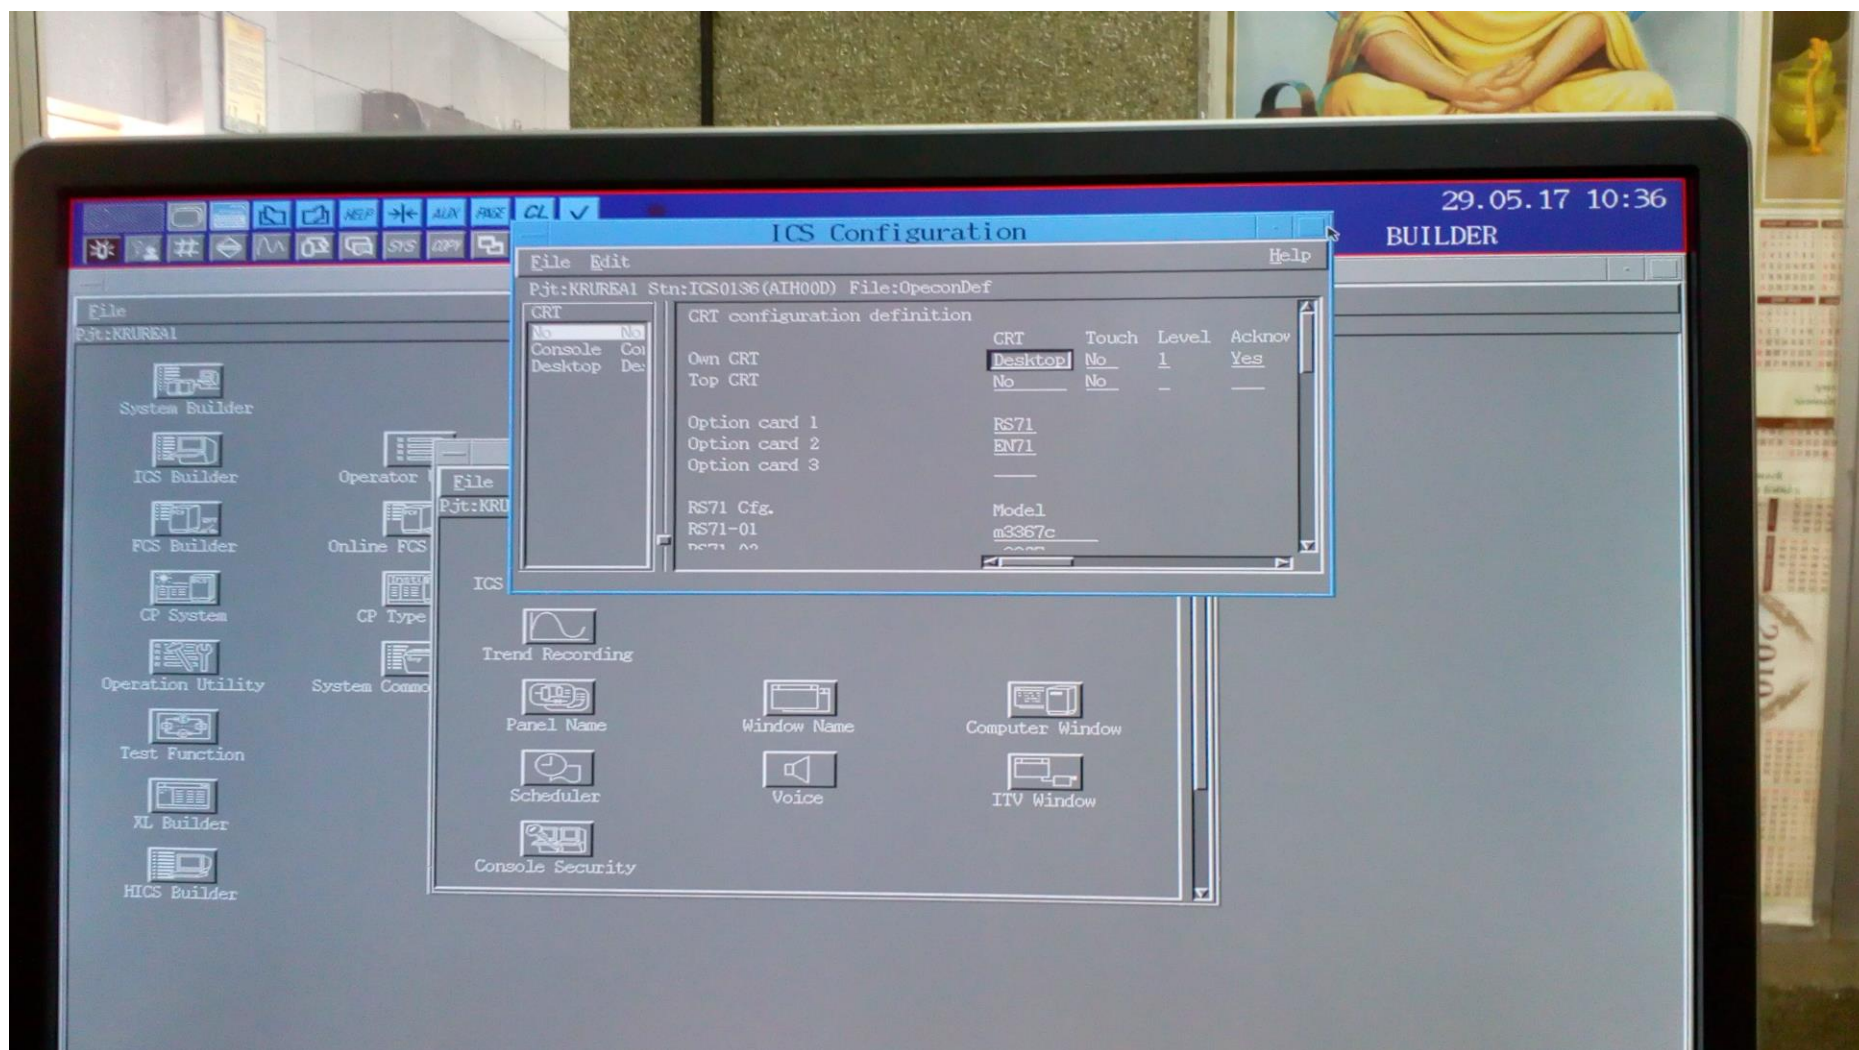

END