## X-Force Alarm Configurator

X-force Alarm configurator application will be used to do the configuration for the Alarm lines capture by the capture process from the DCS end. Here message identification and Field Segregation will be configured. Capture report configuration, Sequence configuration, Notification configuration will be done from the X-Force alarm configurator application.

### Splash Screen

Splash Screen: A splash screen is a graphical control element consisting of a window containing image, a logo, and the current version of the software.

Splash screen typically used for notify the user that the program is in the process of loading. They provide feedback that a process is underway. Occasionally, progress bar within the splash screen indicates the loading progress. A splash screen disappears when the application's main windows appears.

Splash screen progress bar percentage wise list of application processes are as below.

- 10% It will check that application directory having sufficient privilege or not. Application will close with "You have not sufficient privilege to directory." Message if application doesn't have sufficient.
- 20% It will check that application having valid license or not, if application not having valid license then application will close with "License file does not exist. Please contact SSM InfoTech Solutions Pvt. Ltd. to get the valid license." Message.
- 30% It is not having any process right now, in future if any feature are added then it will be used for that.
- 40% -
- 50% -
- 60% -
- 70%,80%,90% It is not having any process right now, in future if any feature are added then it will be used for that.
- Application will start.

## Pre-Requisite


Before starting configuration of X-Force Alarm Configurator, firstly we need to do major configuration.

- 1) Give Every One Rights to the folder where X-Force OPC AE Client application is installed. if user does not give sufficient privilege to the directory then application will exit automatically.
- 2) User have to Keep License file Named "ssmxforce.lic" in the root folder where application is installed. if there is not license file in the root folder or license file is not valid or expired application should exit automatically.
- 3) If any configuration is saved previously then application should load that configuration by default.


## **Alarm Configuration**

Alarm configuration: To split the alarm line into several fields so it gets inserted into the database for further manipulations over data.

Expand SSM InfoTech (Name of the Company) à Configurator à Input Channel. Right click on configured channel and click on Get Message for alarm configuration.

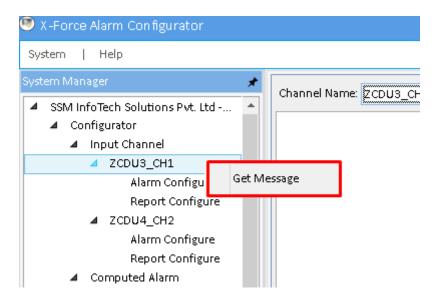

Select alarm line from Captured file that needs to be configured, copy-paste it to the get message section and click on Get Message button as shown below:

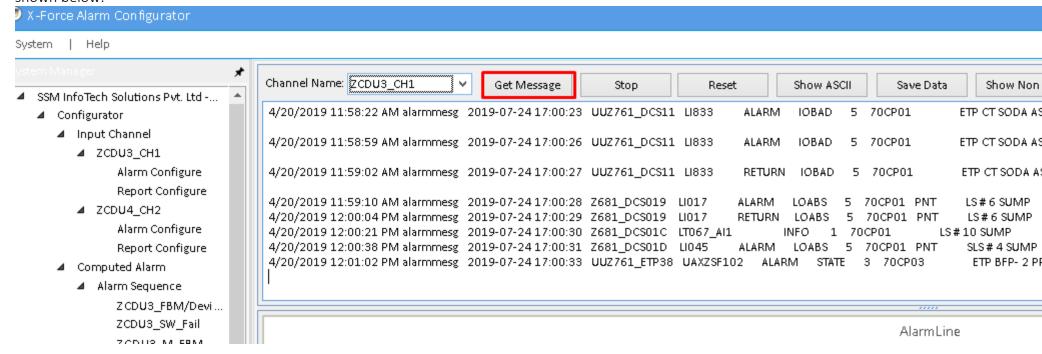


For providing alarm line in Get Message section, go to path C:\Program Files\AlarmSuite\CapturedAlarm\ and open capture file.



SR NO	NAME	DESCRIPTION

1	Get Message	It will apply configuration of Remove Text, Replace Text and Ignore Text as done from X-Force Alarm Web
2	Stop	It will stop printing data
3	Reset	It will reset the Get Message Section
4	Show ASCII	If you want to see ASCII value while applying Remove-Replace-Ignore configuration then click on this button. By this step, button name will be changed to Normal
5	Save Data	If you want to save selected alarm lines.
6	Show Non Configure Alarm	If you want to load non configured alarms then first select database name from dropdown then click on this button.
7	Save Sample File	If you want to save alarms after Remove-Replace-Ignore configuration applied.

Select alarm line that you want to configure and then click on Configure Message button.

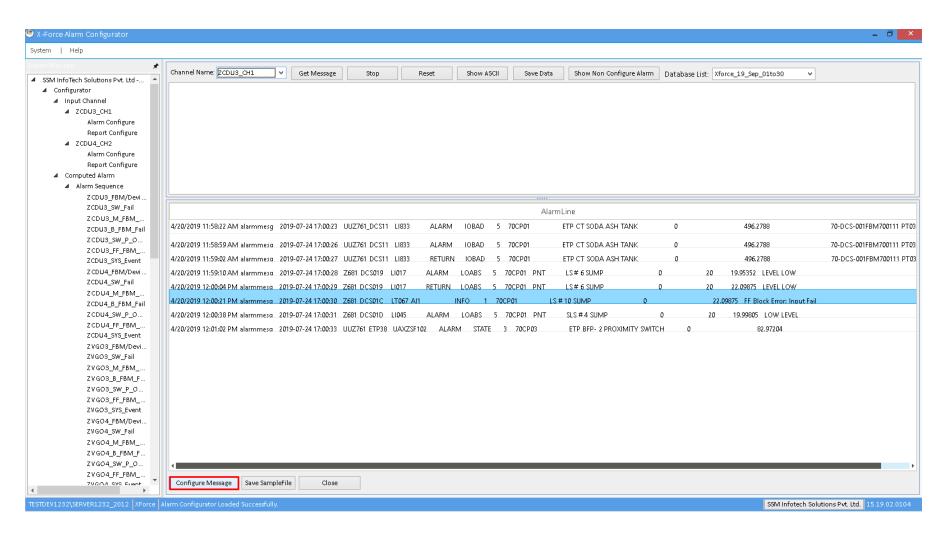

It will display following confirmation message. Click on Yes.


# Confirmation Do you want to Configure Message for Channel: ZCDU3\_CH1? Yes No

It will ask you to use regular expression or not for the configuration. Click on Yes.




Do the alarm configuration and click on Save Configuration button.


#### X-FORCE ALARM CONFIGURATOR- V15 | WWW.SSMINFOTECH.BIZ

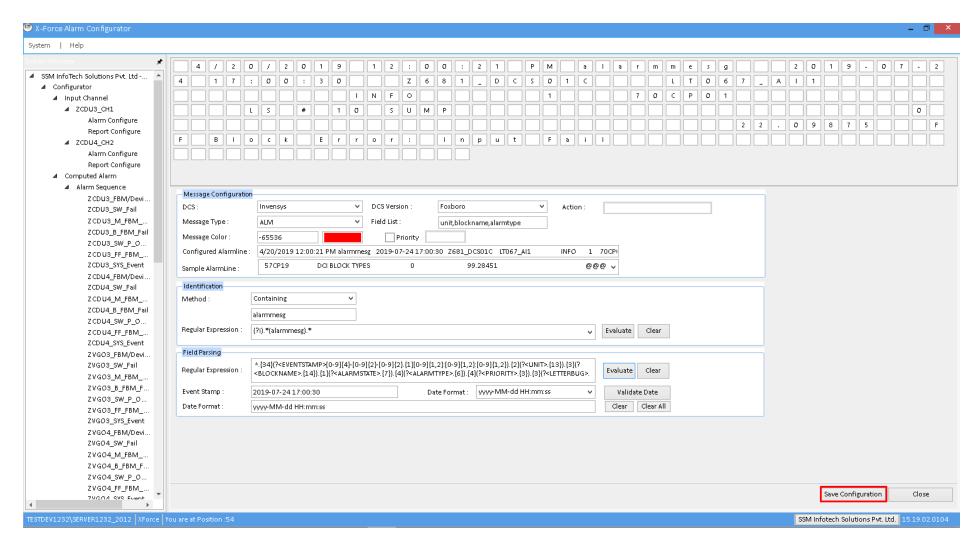


2 You can find the configuration by clicking on Alarm Configure as shown below for the particular channel.

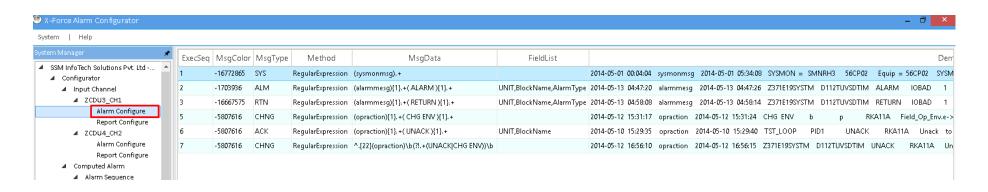

2 If you want to delete any configuration then select that configuration and press Delete key. Click on Yes for the deletion.

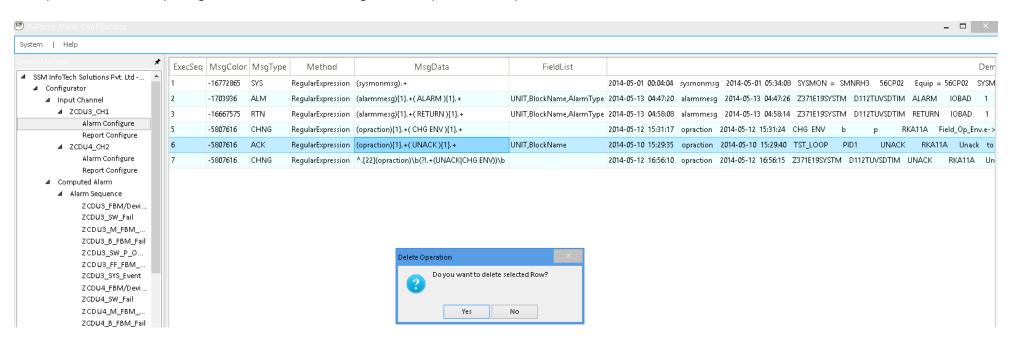

2 After successfully deletion of configuration, it will display below message:

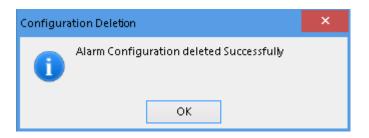

SR NO	NAME	DESCRIPTION
1	Get Message	It will apply configuration of Remove Text, Replace Text and Ignore Text as done from X-Force Alarm Web
2	Stop	It will stop printing data
3	Reset	It will reset the Get Message Section
4	Show ASCII	If you want to see ASCII value while applying Remove-Replace-Ignore configuration then click on this button. By this step, button name will be changed to Normal
5	Save Data	If you want to save selected alarm lines.
6	Show Non Configure	If you want to load non configured alarms then first select database name from dropdown then click on this button.
7	Save Sample File	If you want to save alarms after Remove-Replace-Ignore configuration applied.
8	Method	Identification method type for alarm line identification.


9	Regular expression	Regular expression for validate identification keyword with alarm line
10	Regular expression for field parsing	As name suggest regular expression is used for field parsing of alarm line
11	Event stamp	Event stamp sample for validate alarm line event stamp with configure date time format.
12	Date format	Format for the event stamp of alarm line

# Sequence Configuration

Alarm Sequence :

To set the computed alarm configurations from Alarm Configurator Application, below steps need to be followed:

1.Right click on Alarm Sequence and click on Add Sequence.

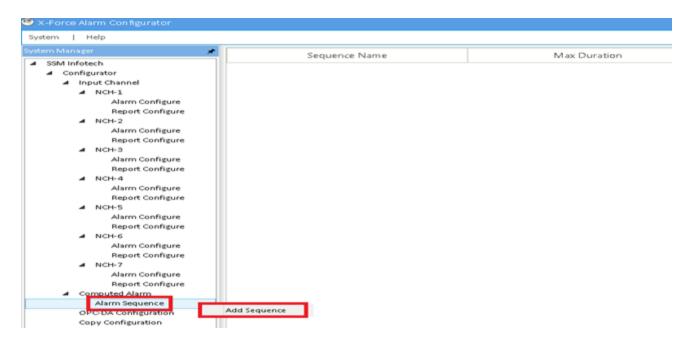

#### General Tab

Name: Provie sequence name you


Maximum Duration:

Channel Name: select channel from dropdown list for which you want to create sequence

**Default Colour:**select default colour for that sequence

save button: on save button click user will get popup for save data sucessfully and redirect to the list page where all sequence list will be displayed inclding new one.

Cancel :on click of cancel page will redirect to Sequence list page

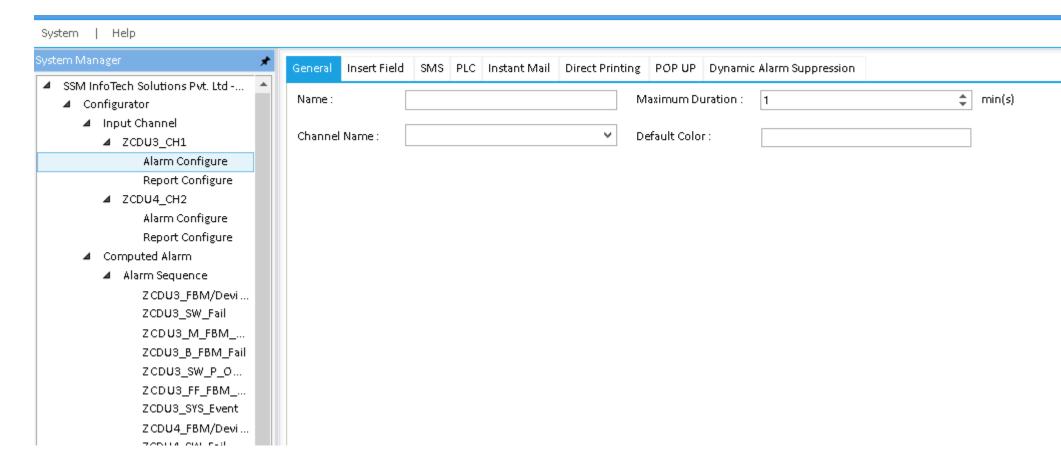


#### Create Trigger

Now right Click on the Sequence Name and click on Add Trigger as shown below:

#### X-FORCE ALARM CONFIGURATOR- V15 | WWW.SSMINFOTECH.BIZ



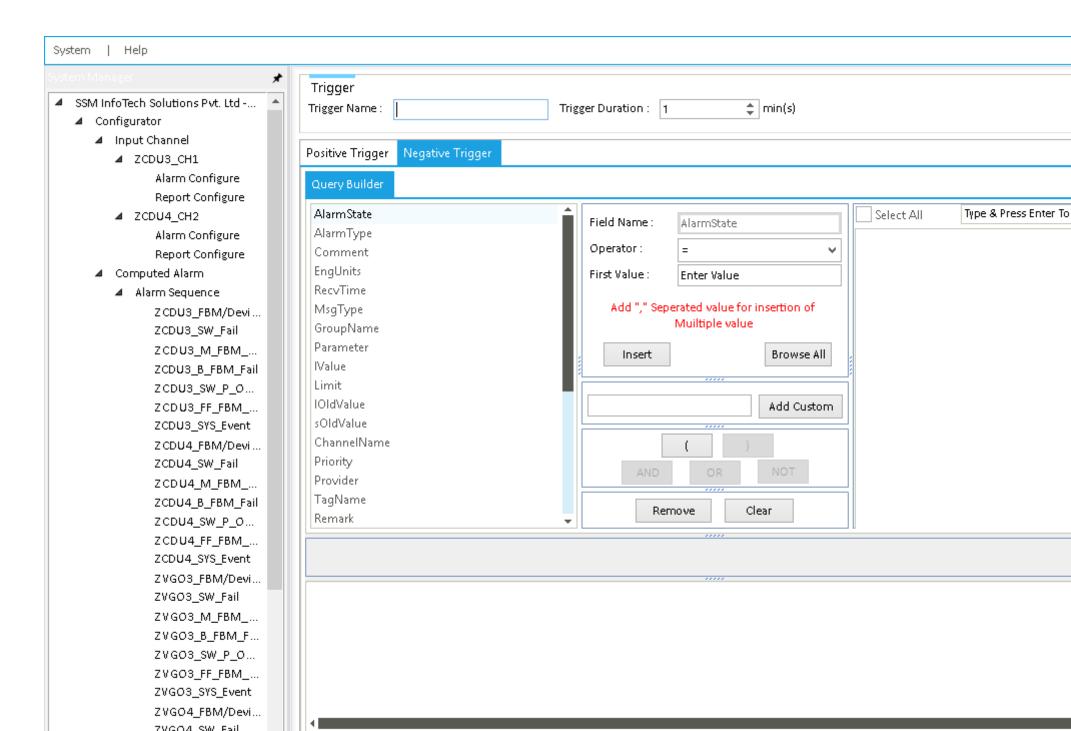

SR NO	FIELD NAME	DESCRIPTION
1	Trigger Name	Name of the Trigger
2	Positive Trigger	Condition for Positive Trigger. Positive trigger will be the Critical condition for abnormality.
3	Negative Trigger	Condition for Negative Trigger. Negative trigger will be the reset condition for Critical situation.

#### Query Builder


Using Query builder user can create different conditions with the help of logical operators and predefined fields.

#### Insert Field

**Generate Alarm:** If this flag is selected then alarm will be generated and its configured notification will be active like SMS, Mail etc.

As shown In image select **field name** from left panel and accordingly in generate Alarm panel(Right Panel) value of alarm state will differ for different field.

If **field name** is having various values in database then it will show in dropdown list against AlarmState and even user can add cutom value as well If there is no value in Database then textbox will be visiblr against **AlarmState** 

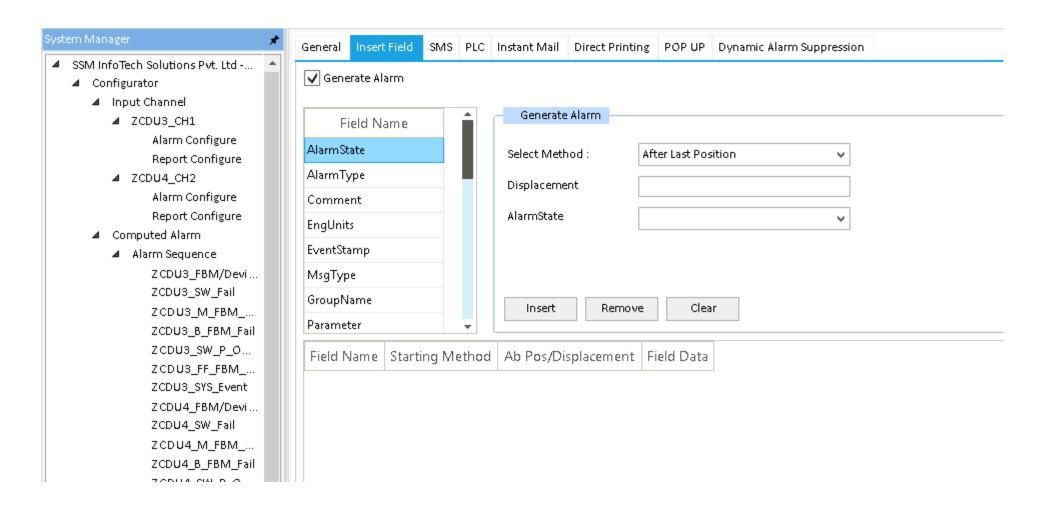

## **Excel Import**

Excel Import: This functionality is used to import dat from excel file and insert into given database and given table.

#### X-FORCE ALARM CONFIGURATOR- V15 | WWW.SSMINFOTECH.BIZ


By clicking on excel import you will have 3 options on screen:

Sample File: select a sample excel file that contains data that need to be inserted in respactive table.

Database Name: Provide database name from the drop down.

Table Name: Provide Table name from the drop down.

Click on import to insert data into selected table.

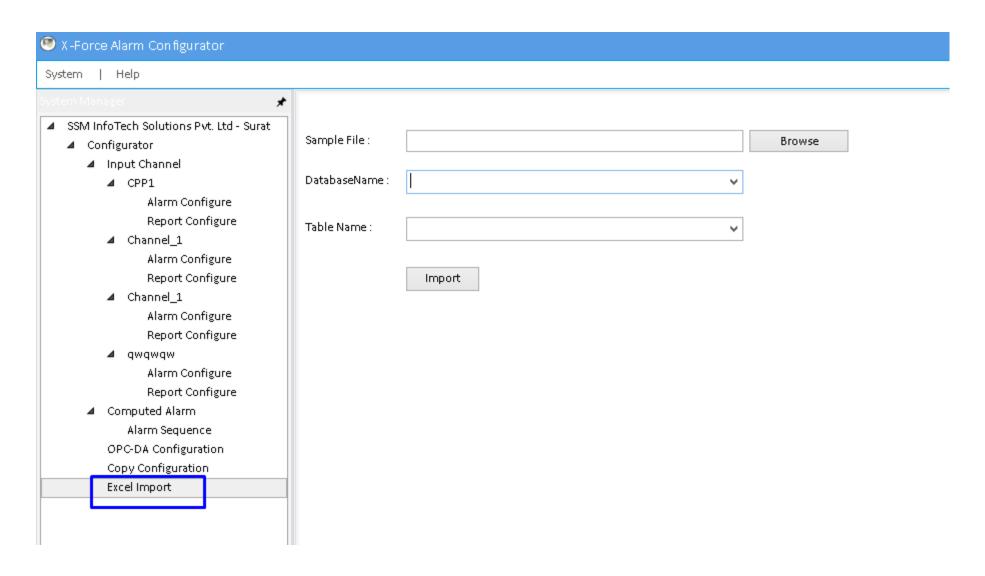

**OPC DA Configuration** 

## **Copy Configuration**


Copy onfiguration: Copy configuration of one channel to another channel. User can copy configuration from single or multiple channel. It includes Alarm configuration including remove-Replace-Ignore configuration, Production report configuration.

Copy To Channel: User has a drop down that in which channel they needs to copy configuration.

Copy from single channel/copy from multiple channel: User can select copy configuration from single or multiple channel. By selecting any of the option from these two than two disfferent pannels will be activated accordingly for single and multiple selection.

Single channel: In single channel pannel user has a drop down to select a channel from which you eant to copy configuration. User has a options to have configuration regarding Remove Text, Replace Text, Ignore Text, Alarms and reports.


Multiple Channel: In multiple channel pannel user has all the same 5 options, each with having drop down of channels. So, user can copy different configuration fom different channels.

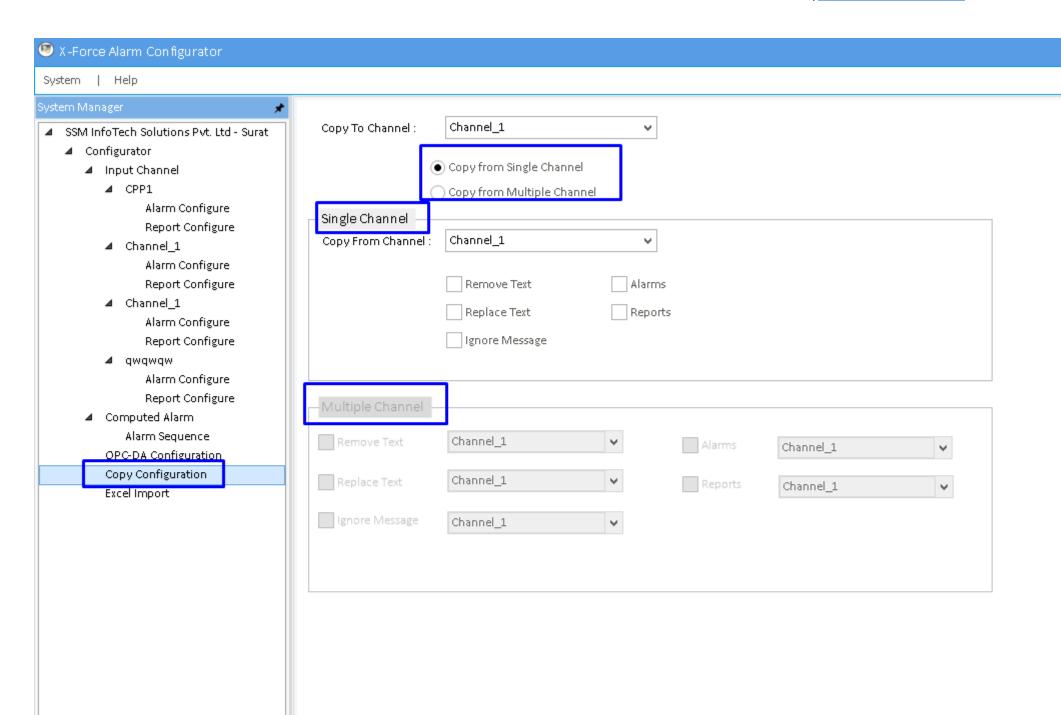

## **Report Configuration**

Few industries have that logs in form of reports that are daily Production reports along with the Alarm so the report are also required to be analyses for the Plant owners for such a purpose Report capturing module is Used. It takes the data and Passes and forms a capture file, this capture file is configured as per the Reports significance. The processing is done through the Data Link which in turns parse the reports and saves it into the Excel HTML and other given format Report Capturing Module that allow you configure four type of report.


- 1. TXT
- 2. XDF
- 3. XLS / XLSX
- 4. HTML

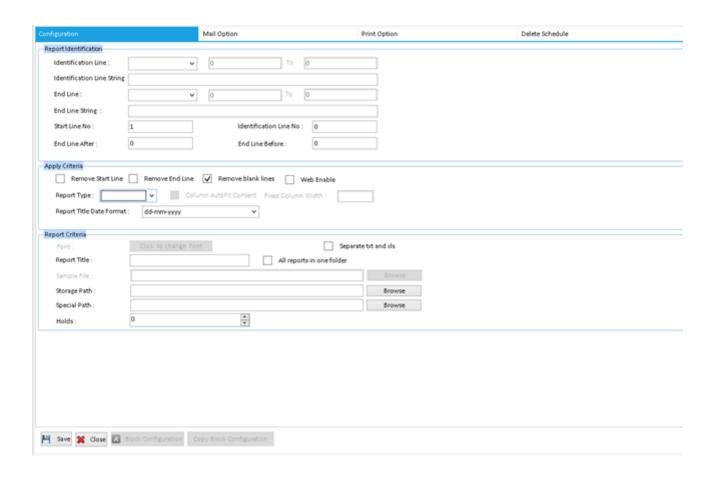


SR NO	FIELD NAME	DESCRIPTION
1	Identification Line	Method of the Identification Line like Start With, End With, Containing and Position Based. If it is Position Based then give starting and ending position

2	Identification Line String	The unique line from report which indicates the starting line
3	End Line	Same as Identification Line
4	End Line String	The string which indicated that this is the end of report
5	Start Line No	Line no from the report from which report should be generated
6	Identification Line No	Line no of the identification line
7	End Line After	How many lines should be in report after end line
8	End Line Before	How many lines should be in report before end line
9	Remove Start Line	Remove start line from report
10	Remove End Line	Remove end line from report
11	Remove Blank Lines	Remove blank line from report
12	Web Enable	Want to enable Web
13	Report Type	Type of report like TXT, XDF, XLS and HTML
14	Column AutoFit Content	Want to Auto fit or not
15	Fixed Column Width	If don't want to auto fit then width of the column
16	Report Title Date Format	Date format for the generated report
17	Font	Font for the report
18	Separate txt and xls	Want to generate txt and XLS file separately

19	Report Title	File name of the generated report
20	All reports in one folder	Want to generate report on Special path or not
21	Sample File	Capture file for the configured criteria
22	Storage Path	Path where to generate report
23	Special Path	Path where to generate report
24	Holds	No. of Copy of report which you want to keep in special folder.

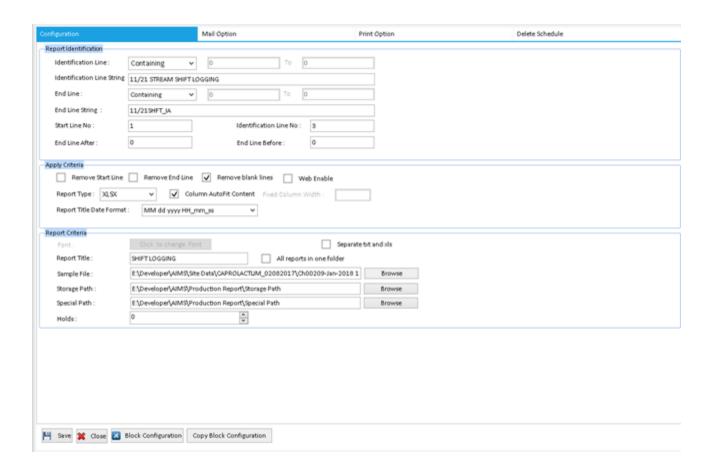


Do the report configuration and click on Save. It will display below message on successfully data stored.

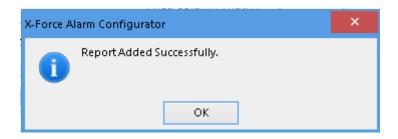


# **Block Configuration**

Double click on added/configured report and then click on Block Configuration. Below Block Configuration window will be displayed:

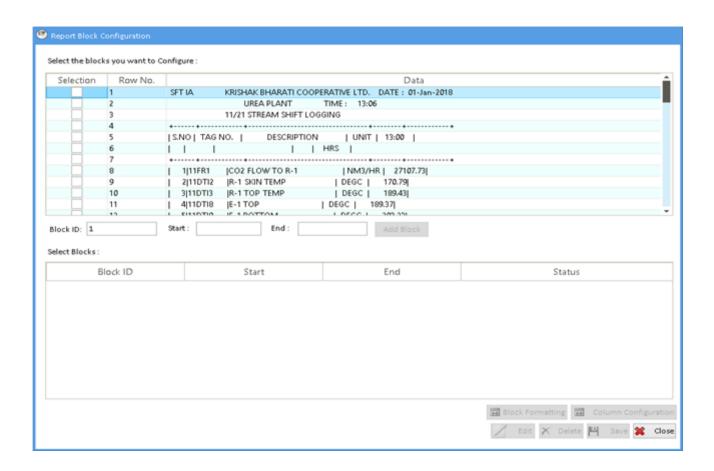


In the very upper grid, you can see the report as per configuration done. Now the block configuration role comes in existence. Do the block description as per requirement.


For Example: If you want to make block of 1st line then check the first checkbox and then click on Add Block.

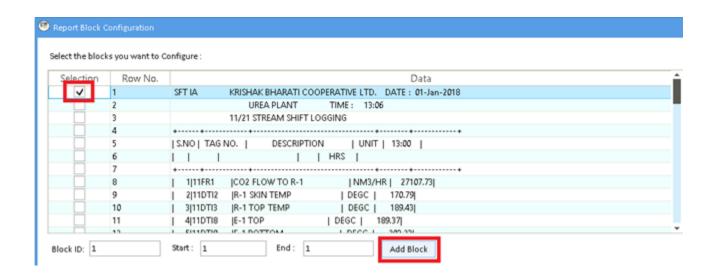


Accordingly, you can add all blocks as per requirement. And then click on Save to save Block Configuration.

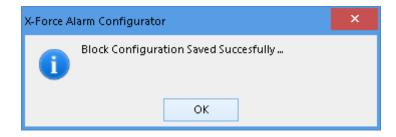

You can find the status of each block as Saved as shown below:

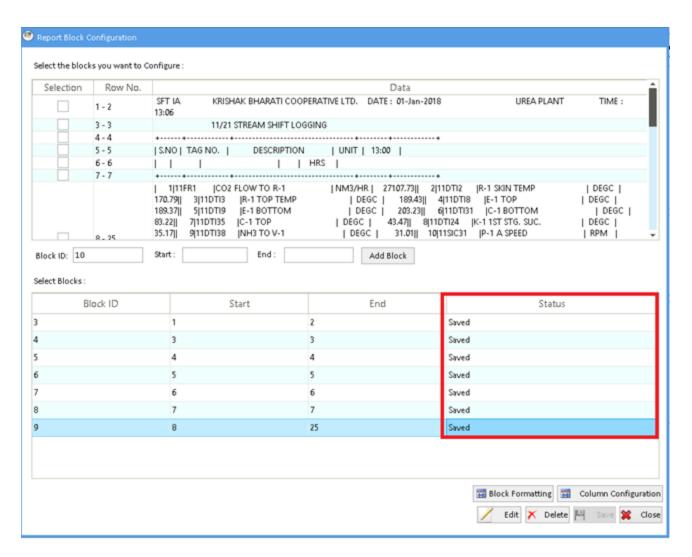

You can Edit or Delete the configured block by selecting that block as shown below:

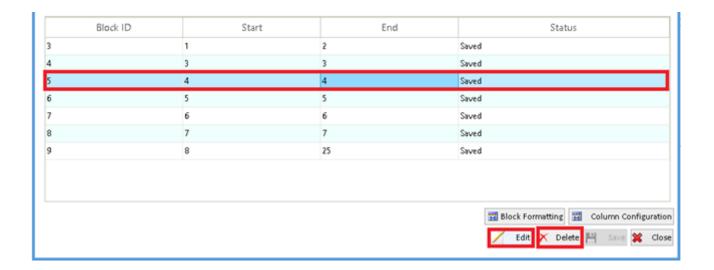


# **Block Formatting**


Click on Block Formatting button to do block formatting configuration as shown below:





You will get below screen on clicking on Block Formatting button:

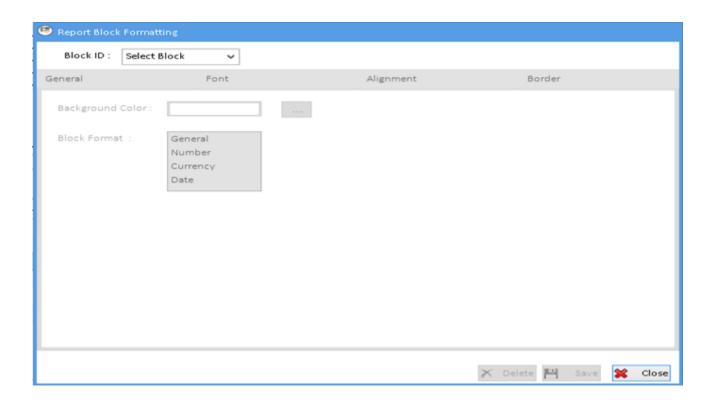


Select block from Block ID dropdown and do the configuration as required and then click on save button.

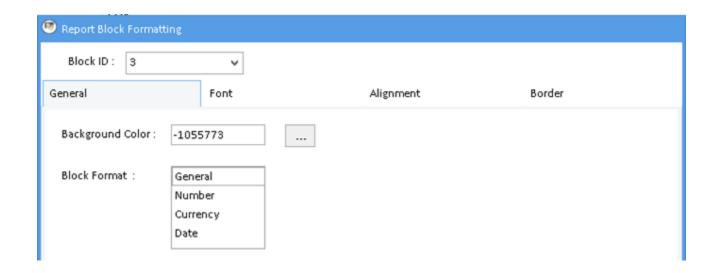

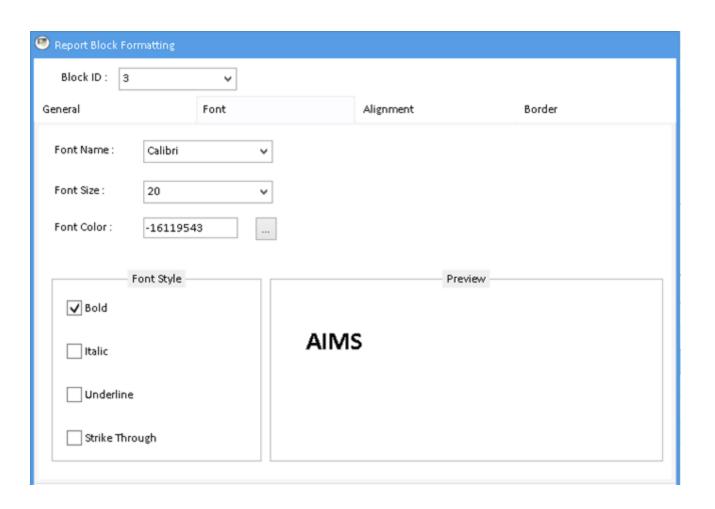

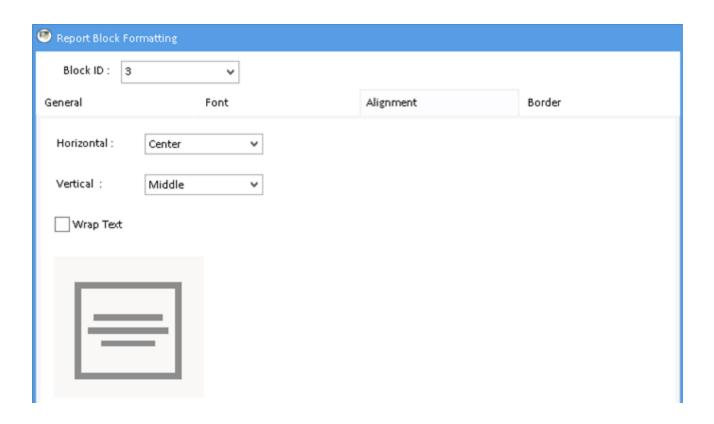

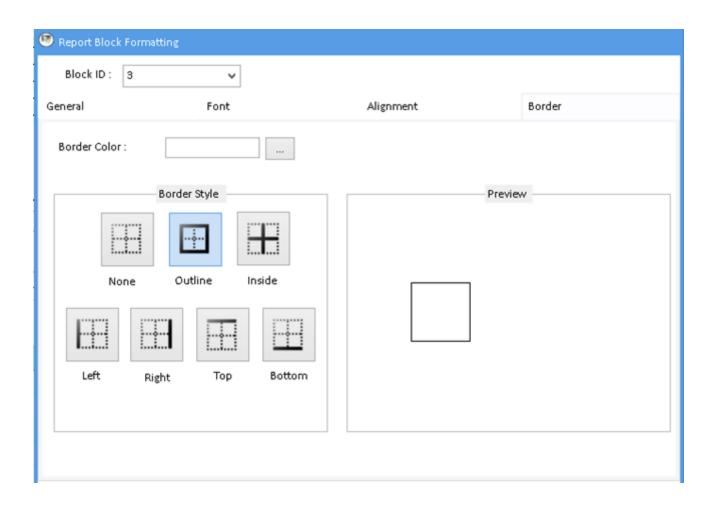


# **Copy Block Configuration**

Copy block configuration is used to copy block configuration of one block to another. Click on Copy Block Configuration button



Below screen will be displayed after clicking on Copy Block Configuration button:

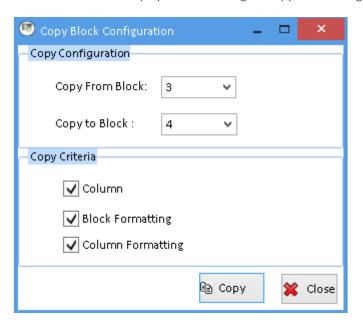


SR	FIELD NAME	DESCRIPTION
NO		
1	Copy From Block	From which you want to copy configuration
2	Copy to Block	To which block you want to copy configuration
3	Column	Want to copy Column Configuration or not


4	Block Formatting	Want to copy Block Formatting or not
5	Column Formatting	Want to copy Column Formatting or not

#### **Column Configuration**


In production report configuration, column configuration is used to decide which part of block will be in which excel cell. Click on Column Configuration button for the Column Configuration as

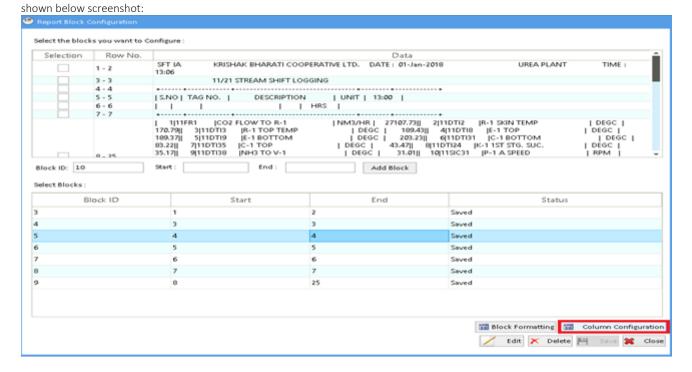


You will get below screen by clicking on Column Configuration button:

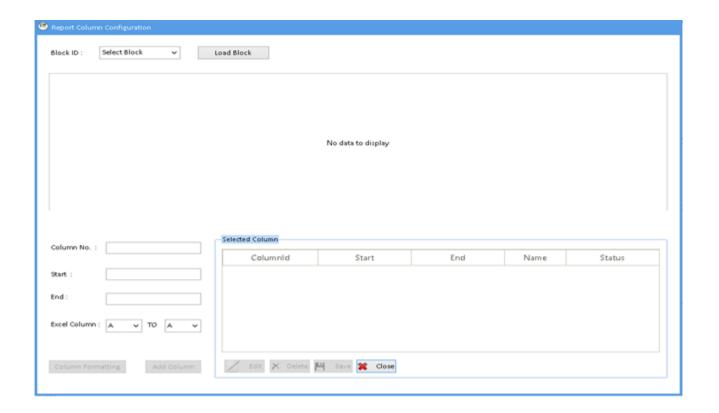


Now select Block from Block ID dropdown and click on Load Block button.

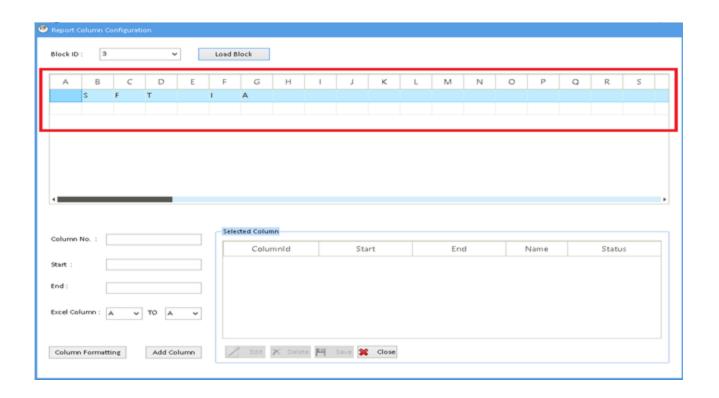


Now click on two cell and then click on Add Column with the configuration of Excel Column as shown below:

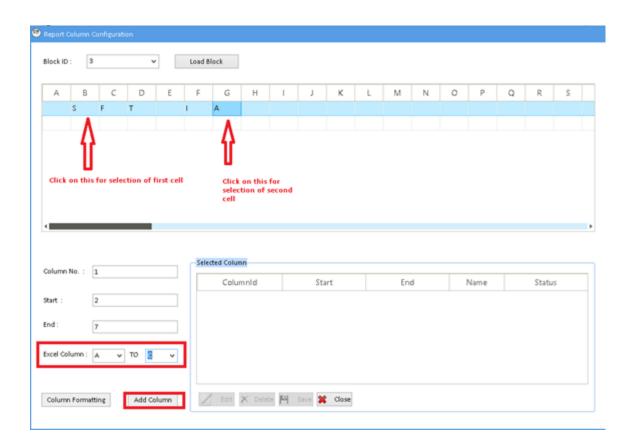


By clicking on Add Column it will be added to grid with Status New.

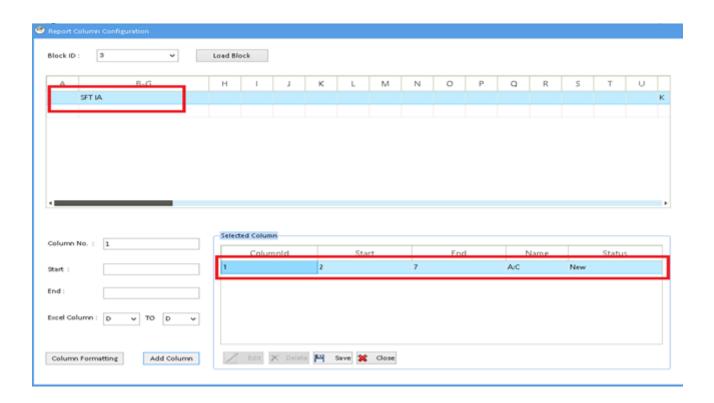

By clicking on save button the status will be changed to Saved.

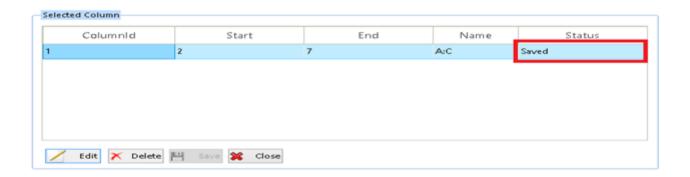


Accordingly, you can configure other columns as shown below:

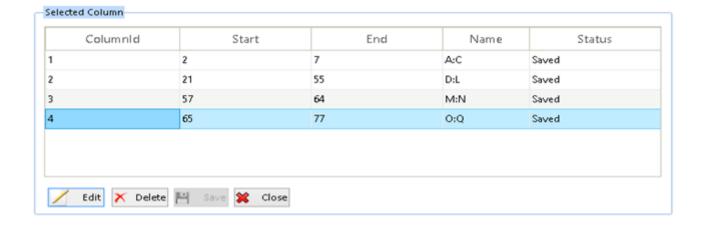


### **Column Formatting**


Click on Column Formatting button to do block formatting configuration as shown below:

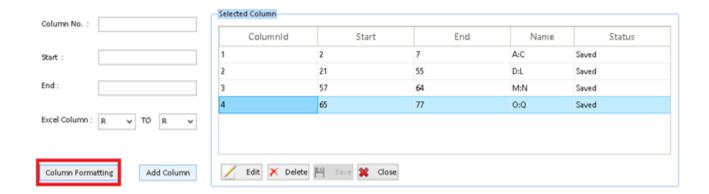



You will get below screen on clicking on Column Formatting button:

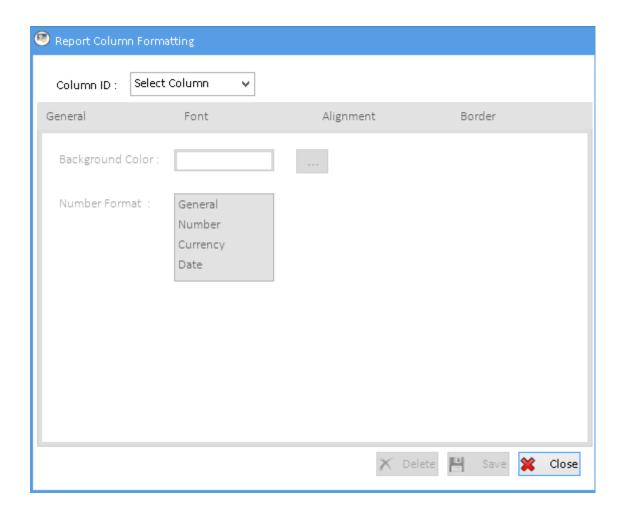


Select column from Column ID dropdown and do the configuration as required and then click on save button.

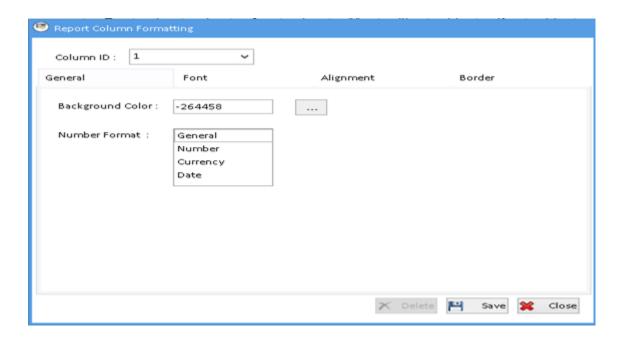

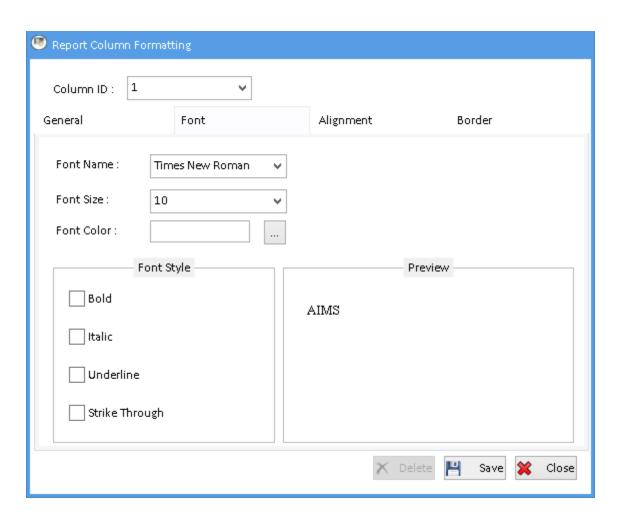


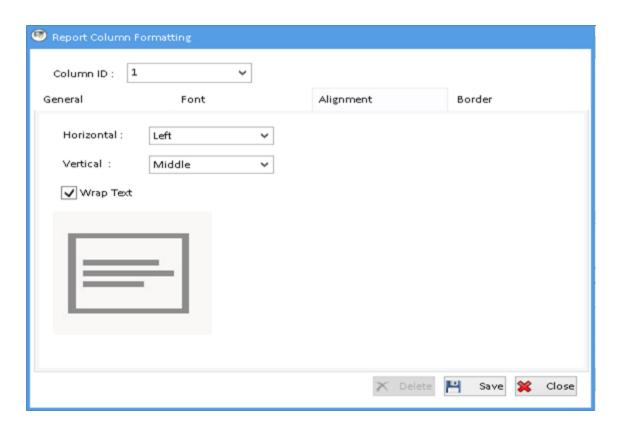

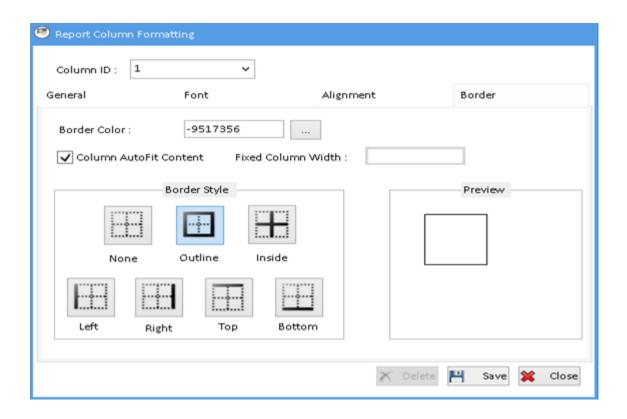

## Mail Option

You can do Mail Configuration for the Report.

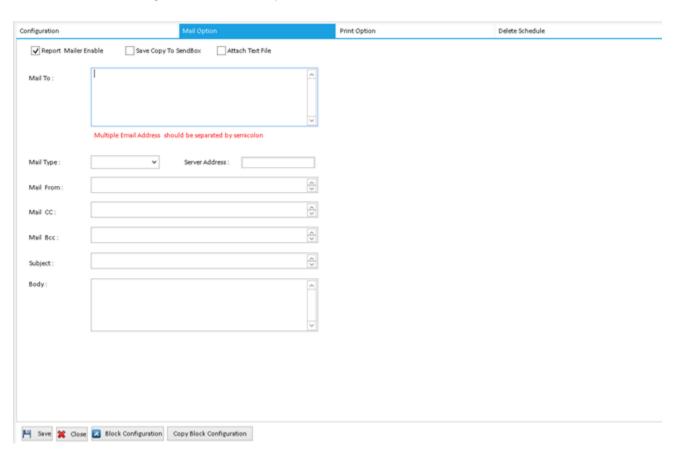


SR NO	FIELD NAME	DESCRIPTION
1	Report Mailer Enable	Want to do mail or not

2	Save Copy To SendBox	Want to save mail in send item
3	Attach Text File	Want to attach text file in mail
4	Mail To	Mail IDS to whom mail should be sent. You can add multiple mail IDs separated by semicolon
5	Mail Type	Type of Mail like Outlook and SMTP
6	Server Address	SMTP Server address if the Mail Type is SMTP
7	Mail From	Mail ID from which mail should be sent
8	Mail CC	Mail IDs for CC
9	Mail BCC	Mail IDs for BCC
10	Subject	Subject of the Mail
11	Body	Description / Reason to send mail

# **Print Option**


You can do Print Configuration for the Report.

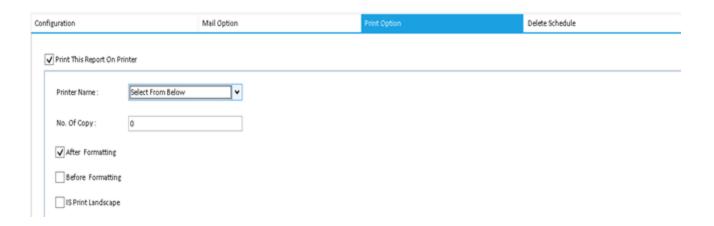

SR NO	FIELD NAME	DESCRIPTION
1	Print This Report On Printer	Want to print this report or not
2	Printer Name	Select printer name
3	No. Of Copy	No. of copy to be printed
4	After Formatting	Want to print report after formatting or not
5	Before Formatting	Want to print report before formatting or not
6	IS Print Landscape	Want to print landscape or not

### Delete Schedule

Delete schedule is used to remove generated reports from the generation path.

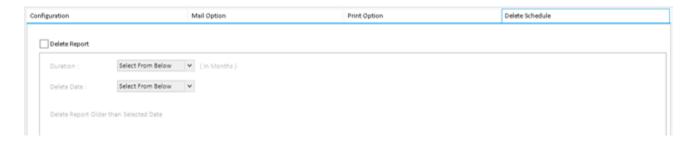

SR NO	FIELD NAME	DESCRIPTION
1	Delete Report	Want to delete report or not
2	Duration	How many old report you want to delete.  For Example: If Duration is 5 then it will delete repots which are older than 5 month
3	Delete Date	Date of the month  For Example: If Delete Date is 15 and Duration is 5 then it will delete reports which are  5 month older and creation date is before 15 of that month.  If today is 7 <sup>th</sup> Jun 2018 then according to above example it will delete reports older than 15 <sup>th</sup> Dec 2017.